



Antimicrobial Test Report

Report Reference:	Client:	Material tested:	Test Laboratory:
PMB.Vacsax - 0003	Vacsax		Anti-Microbial Test Division, Kyoto Biseibutsu Kenkyusyo Yamashina-ku, Kyoto 607-8482, Japan

Evaluation of the antimicrobial performance of samples containing antimicrobial additives. All testing is conducted by an independent laboratory using the ISO 22196 / JIS Z 2801:2000 test method.

Introduction

This report details the analysis carried out on the test samples, including an overview of the test method, the test results, an interpretation of those results and copies of the associated laboratory certificates.

Test samples

Where possible, all test materials are taken from samples of the actual product. Samples typically measure 50mm x 50mm, as specified by the JIS Z 2801:2000 method, although where this is impractical it is permissible to use smaller samples with the method being modified accordingly.

Sample Ref.	Description		
Control	Untreated polyethylene film		
52182-C	Vacsax PE with 1% ME2-30454		

Test method

The samples were tested according to the JIS Z 2801:2000 method, briefly summarised as follows;

Each test sample is inoculated with a suspension of the test organism (for example, MRSA). The inoculum is held in contact with the test sample using a sterile polyethylene film. All test samples are inoculated in triplicate, with an additional three replicates of the control.

The bacterial population on three control replicates is evaluated immediately following inoculation. This is assumed to be the initial population on all test samples (i.e. the population at zero hours).

The remaining samples are incubated for the test period (24 Hours) at 35°C, at which time the bacterial population is evaluated.












Antimicrobial Test Report

Results - MRSA tested at 35°C

		Number of live organisms (Colony Forming Units)		% reduction of Colony Forming Units, expressed	
Sample		0 hours	24 Hours	as comparison with control	
Control	Untreated polyethylene film	140000	150000	N/A	
52182-C	Vacsax PE with 1% ME2-30454		00 <10	>99.993% Reduction	EXCELLENT

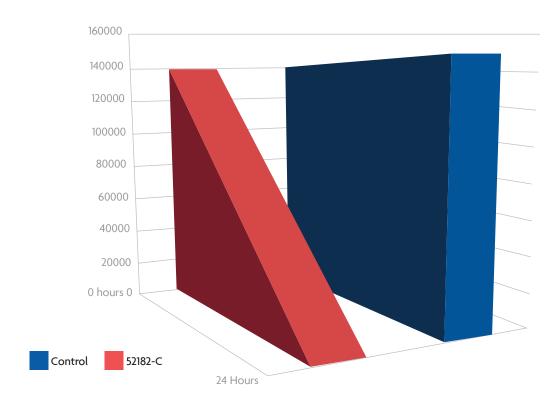











Antimicrobial Test Report

Results - E. coli tested at 35°C

		Number of live organisms (Colony Forming Units)		% reduction of Colony Forming Units, expressed	
Sample		0 hours	24 Hours	as comparison with control	
Control	Untreated polyethylene film	110000	13000000	N/A	
52182-C	Vacsax PE with 1% ME2-30454	110000	<10	>99.99992% Reduction	EXCELLENT

